


## AIR CONDITIONER WEATHERSEAL

### Small

#### TOOLS NEEDED:



#### INSTRUCTIONS:

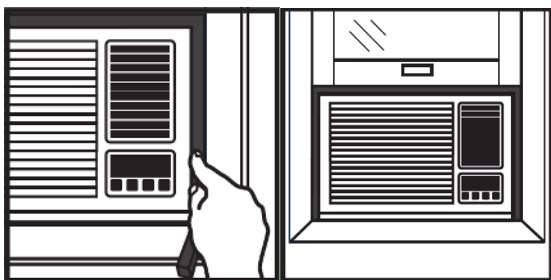

#### INSTALLATION DETAILS:

1. Press foam strip between air conditioner unit and window to form a tight seal.
2. Trim excess foam with scissors.

#### NOTE:

- A second foam strip is often needed to seal the gap between upper and lower sashes.



*M-D Canada, a division of M-D Building Products*

**Headquarters**

5720 Ambler Drive, Mississauga, ON, L4W 2B1  
1-800-565-6653 | [service@mdteam.com](mailto:service@mdteam.com)

**Retail Distribution Center**

2994 Peddie Rd, Unit 2, Milton, ON L9T 6Y9  
1-888-908-1036 | [retailorders@mdteam.com](mailto:retailorders@mdteam.com)


## BANDE D'ÉTANCHÉITÉ EN MOUSSE POUR CLIMATISEUR

Petit

### OUTILS NÉCESSAIRES :



### INSTRUCTIONS :

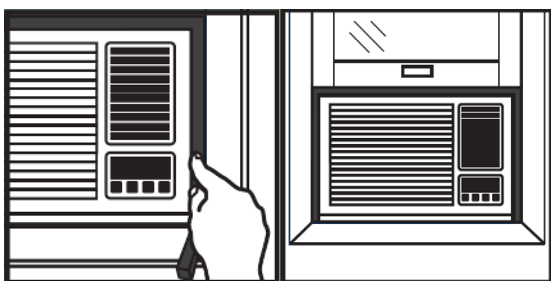

### DÉTAILS POUR L'INSTALLATION :

1. Pressez la bande en mousse entre l'unité de climatisation et la fenêtre de manière à former un joint étanche.
2. Coupez l'excédent de mousse avec des ciseaux.

### REMARQUE :

- Une deuxième bande en mousse est souvent nécessaire afin de combler l'espace entre les châssis supérieur et inférieur.



*M-D Canada, une division de M-D Building Products*

*Siège social*

5720 Ambler Drive, Mississauga (Ontario) L4W 2B1  
1 800 565-6653 | [service@mdteam.com](mailto:service@mdteam.com)

*Centre de distribution au détail*

2994 Peddie Road, Unit 2, Milton (Ontario) L9T 6Y9  
1 888 908-1036 | [retailorders@mdteam.com](mailto:retailorders@mdteam.com)