
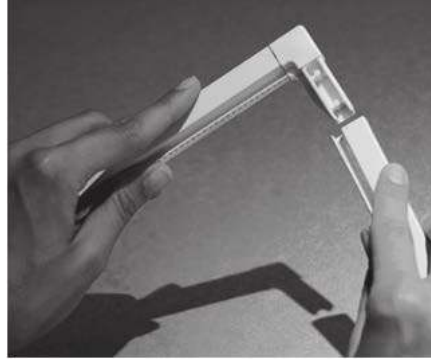


Frame Corners

SUPPLIES NEEDED:

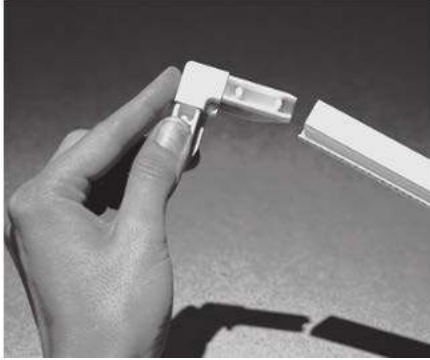

INSTRUCTIONS:

Slip into the end of 7/16" frame to build window or door frame.



M-D Canada, a division of M-D Building Products

Headquarters



5720 Ambler Drive, Mississauga, ON, L4W 2B1
1-800-565-6653 | service@mdteam.com

Retail Distribution Center

2994 Peddie Rd, Unit 2, Milton, ON L9T 6Y9
1-888-908-1036 | retailorders@mdteam.com

Coins de cadre

FOURNITURES NÉCESSAIRES :

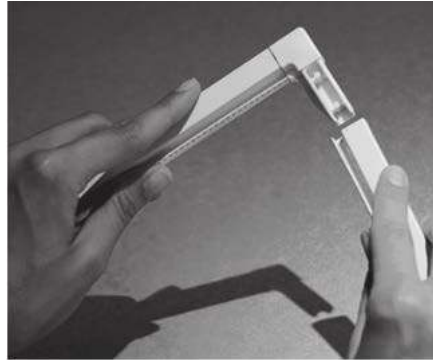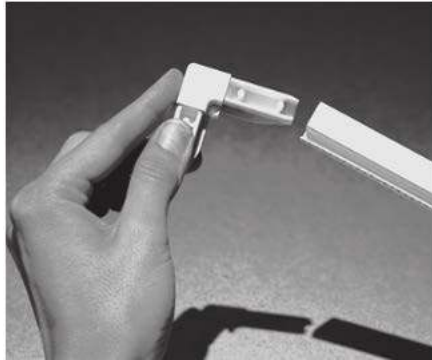

INSTRUCTIONS :

Insérer dans l'extrémité d'un cadre de 11 mm pour fabriquer des cadres de fenêtres ou de portes.



M-D Canada, une division de M-D Building Products

Siège social

5720 Ambler Drive, Mississauga (Ontario) L4W 2B1
1 800 565-6653 | service@mdteam.com

Centre de distribution au détail

2994 Peddie Road, Unit 2, Milton (Ontario) L9T 6Y9
1 888 908-1036 | retailorders@mdteam.com