


EXPANDABLE FOAM WEATHERSEAL

TOOLS NEEDED:



INSTRUCTIONS:

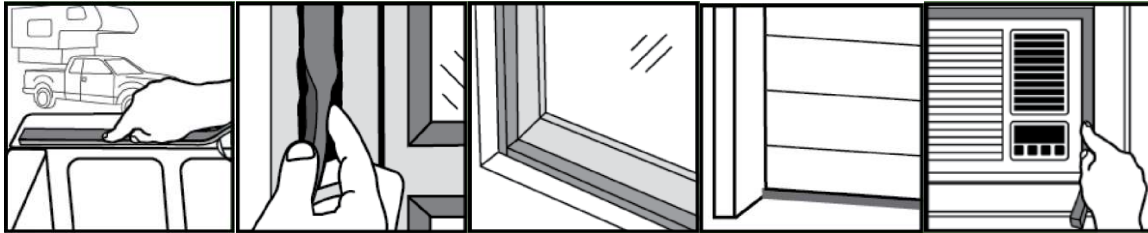

INSTALLATION DETAILS:

Foam Tape should be stored in an interior dry location. Tape expansion will be faster at higher temperatures and slower at lower temperatures. Ideal installation temperature is 75 ° F. Surfaces where material is being applied should be dry and cleaned of dirt, oils, grease, etc. For best adhesion results, use within two years of purchase. Only open materials that will be immediately used. To open, remove shrink wrap and cut through liner. Remove liner to expose adhesive and press adhesive face to the surface. Foam Tape may take up to one hour to fully expand, depending on conditions.

TIP:

For faster expansion in cold conditions keep the material warm before use and, if desired, apply heat from a hair dryer to installed material to accelerate expansion.



M-D Canada, a division of M-D Building Products

Headquarters

5720 Ambler Drive, Mississauga, ON, L4W 2B1
1-800-565-6653 | service@mdteam.com

Retail Distribution Center


2994 Peddie Rd, Unit 2, Milton, ON L9T 6Y9
1-888-908-1036 | retailorders@mdteam.com

RUBAN ISOLANT EXPANSIBLE EN MOUSSE

OUTILS NÉCESSAIRES :



INSTRUCTIONS :

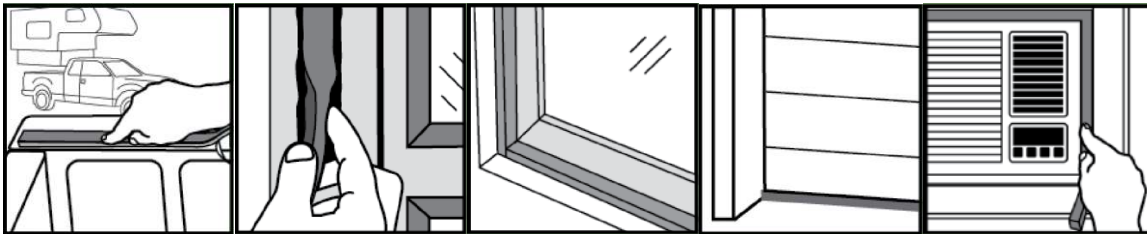

DÉTAILS POUR L'INSTALLATION :

Le ruban en mousse doit être stocké dans un endroit sec à l'intérieur. L'expansion du ruban sera plus rapide à des températures plus élevées et plus lente à des températures plus basses. La température d'installation idéale est de 24 ° C. Les surfaces sur lesquelles le matériau est appliqué doivent être sèches et nettoyées de la saleté, des huiles, de la graisse, etc. Pour de meilleurs résultats d'adhérence, utiliser dans les deux ans suivant l'achat. N'ouvrir que les matériaux qui seront immédiatement utilisés. Pour ouvrir, retirer la pellicule rétractable et couper à travers la doublure. Retirer la doublure pour exposer l'adhésif et appuyer la face adhésive sur la surface. Le ruban en mousse peut prendre jusqu'à une heure pour se dilater complètement, selon les conditions.

CONSEIL :

Pour une expansion plus rapide par temps froid, garder le matériau au chaud avant utilisation et, si vous le souhaitez, appliquer la chaleur d'un sèche - cheveu sur le matériau installé pour accélérer l'expansion.



M-D Canada, une division de M-D Building Products

Siège social

Centre de distribution au détail

5720 Ambler Drive, Mississauga (Ontario) L4W 2B1
1 800 565-6653 | service@mdteam.com

2994 Peddie Road, Unit 2, Milton (Ontario) L9T 6Y9
1 888 908-1036 | retailorders@mdteam.com